


# TARA operating notes for Kenwood TM-G707A

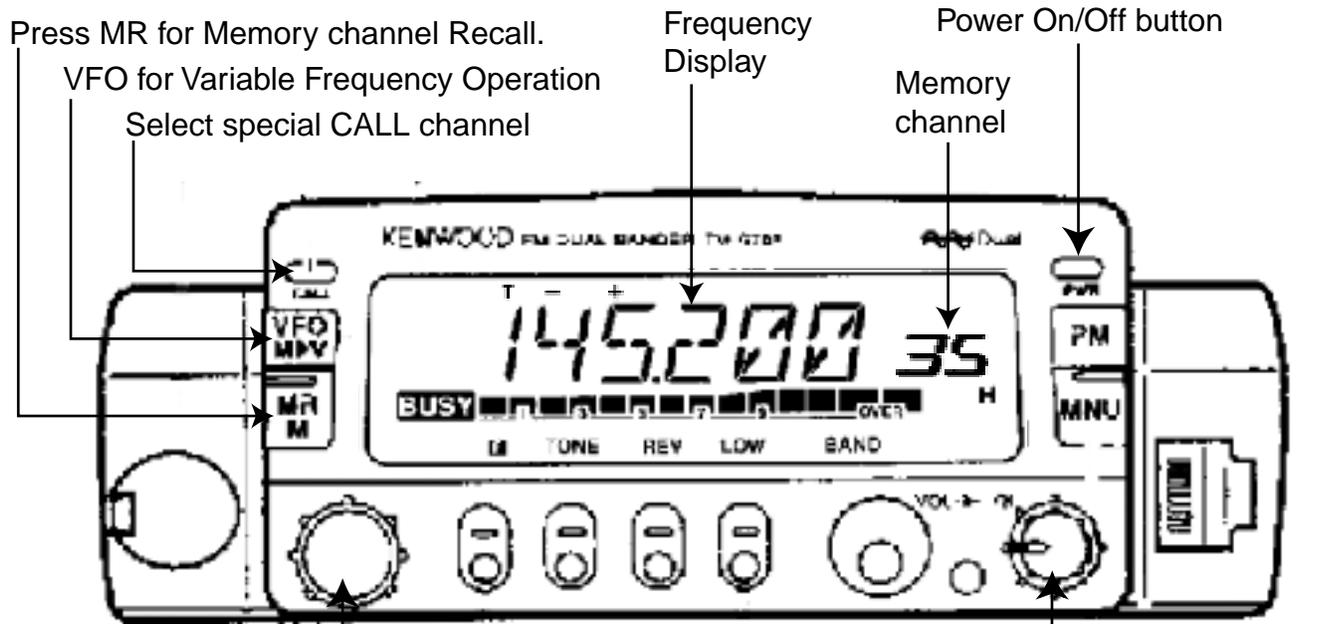

Use Tuning control knob (or microphone Down/Up buttons) to:

- > change channel in MR mode (Press center button to display frequency or alpha label.)
- > change frequency in VFO mode (Press center button for Mhz steps)
- > Select menu entries (See Kenwood manual for menu and programming information.)


Multi-function buttons  
Follow LCD labels depending on selected mode

- > TONE selects CTCSS Off/On
- > F+T.SEL select CTCSS frequency
- > F+SHIFT set repeater offset
- > REVERSE switches transmit/receive frequencies
- > LOW selects Low, Med, High RF output power
- > BAND switches VHF/UHF
- > F button alters meaning of other controls.

To program memory channels:

- > Dial or Key in frequency in VFO mode. Select repeater offset, CTCSS mode, etc.
- > Press F. Memory channel number appears.
- > Dial in channel number desired (G = in use)
- > Press MR to store, or F to cancel.

Microphone lock switch on rear

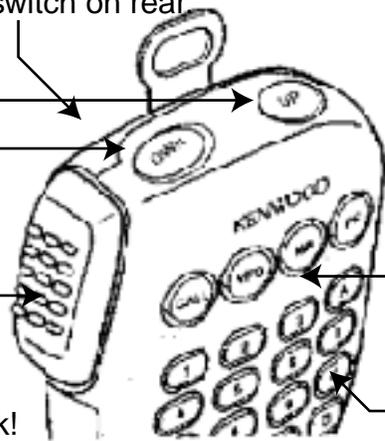

Push to Talk!  
Release to Listen!

Mic buttons duplicate panel buttons.

DTMF or direct numeric entry keys

Do not transmit on High output power for extended periods. The transceiver may overheat and malfunction.