CITY OF TORRANCE

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM

FEAP 800

GENERAL NOTES

1. ALL WORK SHALL BE DONE IN ACCORDANCE WITH THE STANDARD SPECIFICATIONS FOR PUBLIC WORKS CONSTRUCTION, LATEST EDITION AND SUPPLEMENTS THEREO, AS WRITTEN AND PROMULGATED BY PUBLIC WORKS STANDARDS, INC., HEREINAFTER REFERRED TO AS THE STANDARD SPECIFICATIONS, THE TORRANCE STANDARDS, AND TO THE SATISFACTION OF THE COMMUNITY DEVELOPMENT OR PUBLIC WORKS DIRECTOR.

2. IT SHALL BE THE RESPONSIBILITY OF THE CONTRACTOR TO LOCATE, VERIFY DEPTH AND PROTECT ALL STRUCTURES, INCLUDING SUBSTRUCTURES, SHOWN ON THE PLAN. THE CONTRACTOR SHALL BEAR THE ENTIRE COST OF REPAIRING OR REPLACING ANY OF SAID STRUCTURES DAMAGED BY HIM/HER DURING PROSECUTION OF THE WORK. ALL REPAIRS AND REPLACEMENTS SHALL BE DONE IN THE PRESENCE OF THE INSPECTOR. ALL LOCATIONS SHOWN ON THE PLAN FOR UTILITY LINES HAVE BEEN TAKEN FROM AVAILABLE RECORDS AND THEIR COMPLETENESS AND CORRECTNESS ARE IN NO WAY GUARANTEED.

3. THE CONTRACTOR SHALL NOTIFY UNDERGROUND SERVICE ALERT (USA) AT 1-800-227-2600 AND ALL PUBLIC UTILITY COMPANIES AND OWNERS OF PRIVATE FACILITIES WITHIN THE AREA OF CONSTRUCTION AT LEAST 2 WORKING DAYS IN ADVANCE OF PERFORMING ANY WORK WITHIN SAID AREA.

4. THE CONTRACTOR SHALL OBTAIN ALL NECESSARY PERMITS FROM THE CITY BEFORE COMMENCING WORK. TRAFFIC CONTROL WITHIN PUBLIC STREET RIGHTS OF WAY SHALL BE IN CONFORMANCE WITH THE CALIFORNIA MUTCD MANUAL OR CITY OF TORRANCE STANDARDS FOR TRAFFIC CONTROL, LATEST EDITION. THE CONTRACTOR SHALL PROVIDE A 24-HOUR TELEPHONE NUMBER FOR EMERGENCY REPAIRS TO TRAFFIC CONTROL AND PAVEMENT MARKINGS.

5. CAUTION: REVIEW APPROVED CONSTRUCTION PLAN. IF CONSTRUCTION REQUIRES WORKERS AND/OR EQUIPMENT TO BE WITHIN 6 FEET OR CRANES OR HOISTING DEVICES TO BE WITHIN 10 FEET OF OVERHEAD ELECTRIC LINES, CALL SOUTHERN CALIFORNIA EDISON CO. AT 310-783-9336.

6. THE CONTRACTOR SHALL NOTIFY THE PUBLIC WORKS DEPARTMENT AT 310-781-6900 PRIOR TO TRIMMING, REMOVING OR RELOCATING ANY EXISTING STREET TREES.

7. UNLESS OTHERWISE SHOWN, ALL TRAFFIC SIGNS SHALL BE RELOCATED OR REMOVED BY THE CONTRACTOR. THE CONTRACTOR SHALL NOTIFY THE PUBLIC WORKS DEPARTMENT AT 310-781-6900 AT LEAST 2 WORKING DAYS IN ADVANCE OF THE WORK.

8. STORM DRAIN MODIFICATIONS TO THE L.A. COUNTY STORM DRAIN SYSTEM REQUIRE A PERMIT FROM L.A. COUNTY (1-626-458-3129) BEFORE WORK ON THOSE FACILITIES CAN BEGIN.

9. TRENCHES CUT INTO AN EXISTING ROADWAY WITHIN THE PUBLIC RIGHT OF WAY SHALL BE BACKFILLED AND PAVED AS PER TORRANCE STANDARD T116.

10. DURING NON-CONSTRUCTION HOURS, ALL EXCAVATIONS MUST BE APPROPRIATELY SHORED, PLATED OR BACKFILLED EXCEPT BORE PITS WHICH SHALL BE SECURED WITH K-RAIL AND 6' HIGH CHAIN LINK FENCE PANELS SECURED IN PLACE TO THE SATISFACTION OF THE PUBLIC WORKS INSPECTOR. STEEL PLATES SHALL BE TACK WELDED, PINNED AND/OR SECURED IN PLACE BY ANOTHER METHOD APPROVED BY THE INSPECTOR.

11. THE CONTRACTOR SHALL MAKE AVAILABLE FOR THE INSPECTOR'S REVIEW, ON A DAILY BASIS, AS-BUILT DRAWINGS FOR WORK PERFORMED UP TO AND INCLUDING THE PREVIOUS DAY'S ACTIVITIES. WORK SHALL NOT BE CONSIDERED AS COMPLETE UNTIL AS-BUILT DRAWINGS ARE SUBMITTED TO AND ACCEPTED BY THE COMMUNITY DEVELOPMENT DIRECTOR.

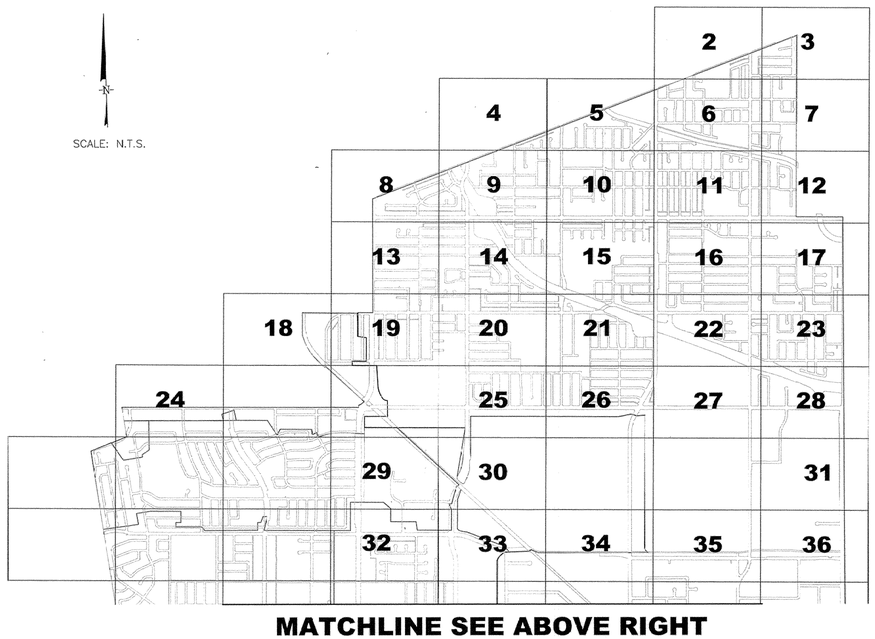

SCALE: N.T.S.

MATCHLINE SEE ABOVE RIGHT

MATCHLINE SEE BELOW LEFT

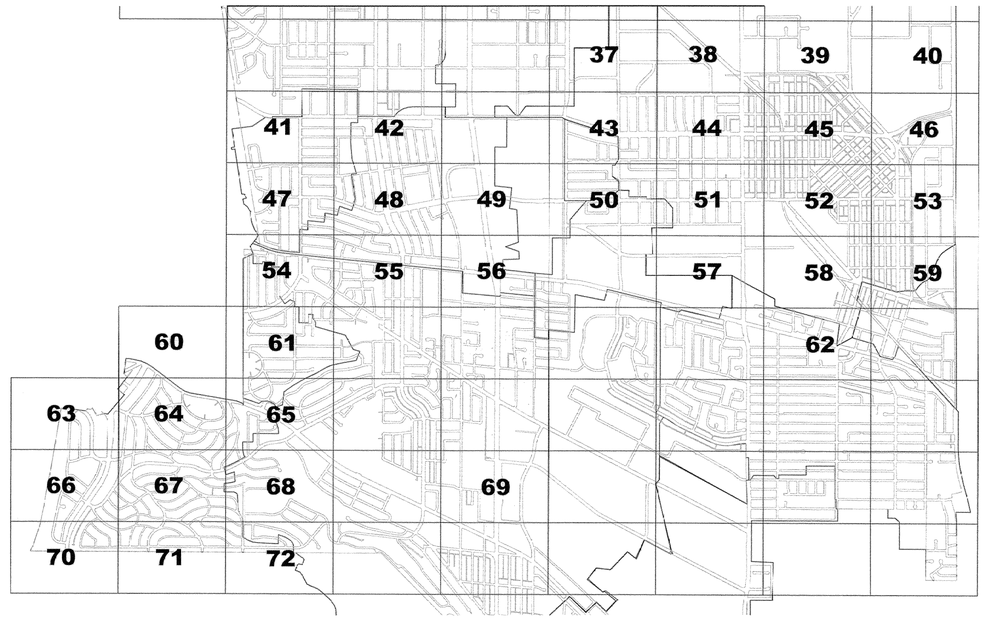

SHEET INDEX MAP

N.T.S.

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811

Know what's below.
Call before you dig.
TWO WORKING DAYS BEFORE YOU DIG

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM
FEAP 800

TITLE SHEET
INDEX MAP

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER
CRAIG BILEZERIAN
No. 55339
Exp. 12/31/16
CIVIL
STATE OF CALIFORNIA

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

APPROVED BY:
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)
DATE 4/27/16

SHEET 1 OF 74
SCALE: AS SHOWN
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO.
PLAN NO. SD-508

I:\JOBS\OPTIMIZED Weekly Street Sweeping Program FEAP-800\Plan Sheets\Cover Title Sheet.dgn 4/20/2016 11:40 rgmcleod

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

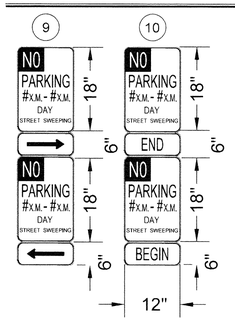

Base Map Sheet # 1

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY:	DRAWN BY:
WM/JD	VP

PROJECT ENGINEER: WILSON MENDOZA

ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER — CRAIG O. BILEZERIAN — No. 55339 — Exp. 12/31/16 — CIVIL — STATE OF CALIFORNIA

APPROVED BY: 4/27/16

CRAIG BILEZERIAN, PE — DATE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET	2 OF 74
SCALE:	1" = 100'
SPECIFICATION NO.	
SUPPLEMENTAL PLAN NO.	SEE TITLE SHEET
PLAN NO.	**SD-508**

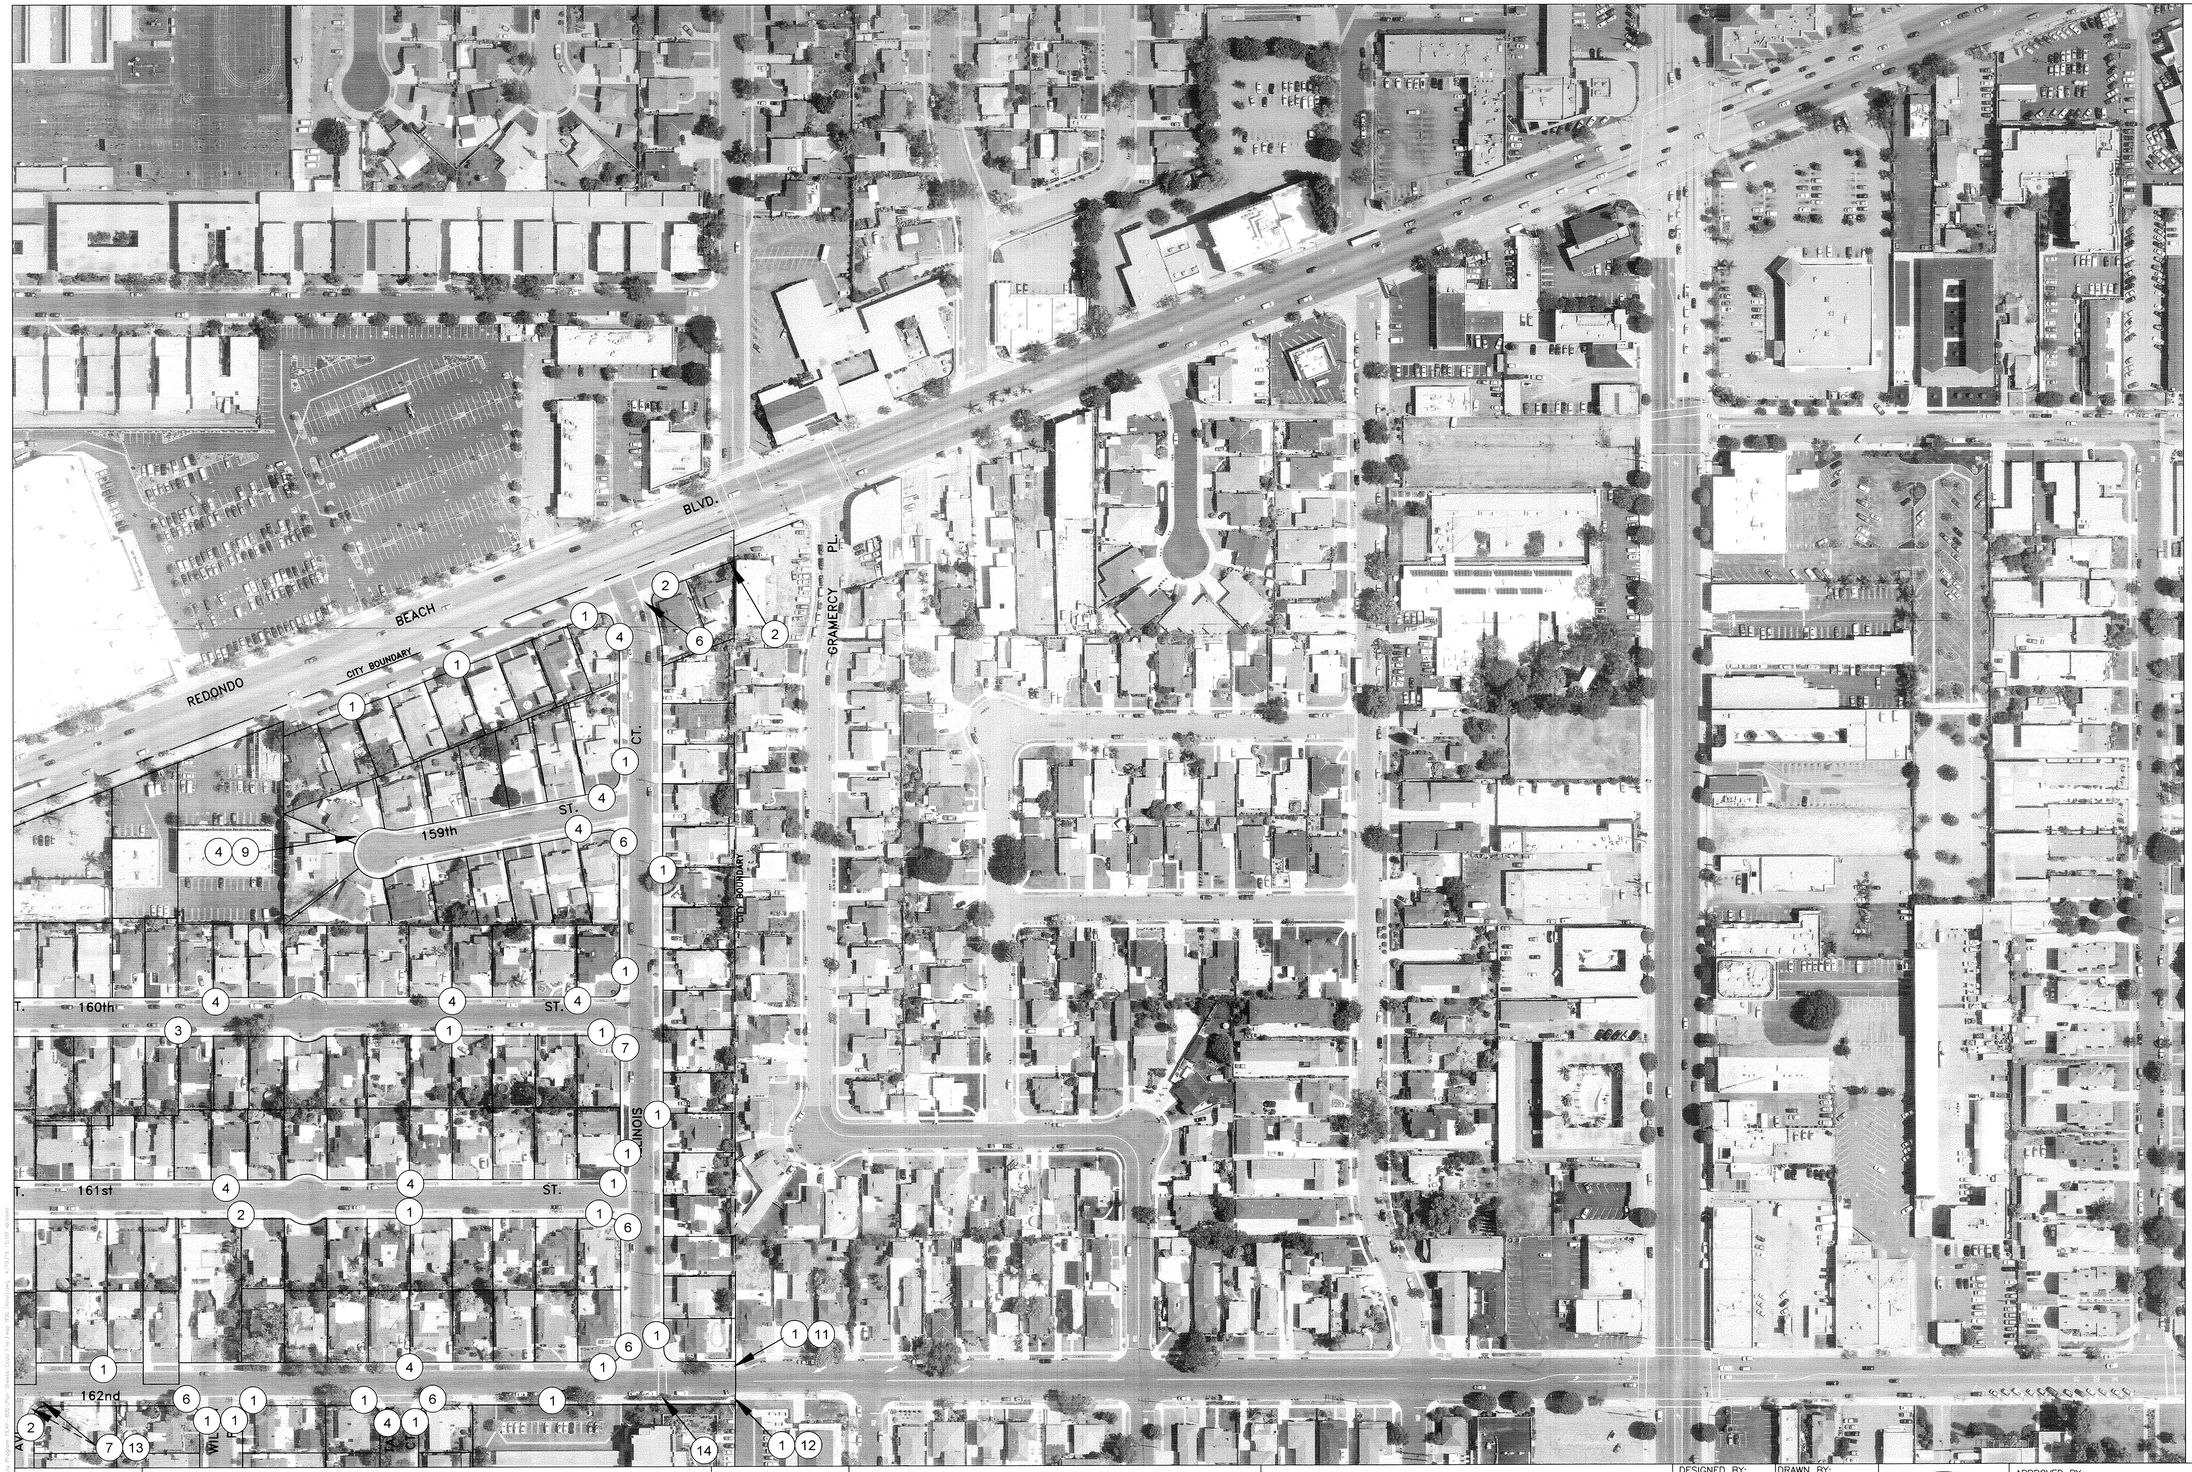

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

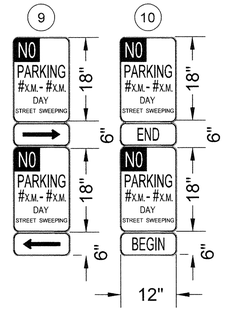

Base Map Sheet # 2

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS

REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER — CRAIG BILEZERIAN — No. 55339 — Exp. 12/31/16 — CIVIL — STATE OF CALIFORNIA

APPROVED BY: 4/27/16 DATE
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 3 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN, INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

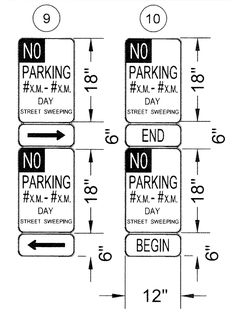

Base Map Sheet # 3

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig.
TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

N

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY: 4/27/16
CRAIG BILEZERIAN, PE — DATE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 4 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

Base Map Sheet # 4

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig.
TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY:	DRAWN BY:
WM/JD	VP

PROJECT ENGINEER: WILSON MENDOZA

ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER — CRAIG BILEZERIAN — No. 55339 — Exp. 12/31/16 — CIVIL — STATE OF CALIFORNIA

APPROVED BY: 4/22/16

CRAIG BILEZERIAN, PE — DATE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET	5 OF 74
SCALE:	1" = 100'
SPECIFICATION NO.	
SUPPLEMENTAL PLAN NO.	SEE TITLE SHEET
PLAN NO.	**SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

9

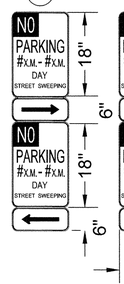

10

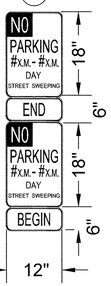

Base Map Sheet # 5

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY:	DRAWN BY:
WM/JD	VP

PROJECT ENGINEER: WILSON MENDOZA

ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY: 4/27/16

CRAIG BILEZERIAN, PE — DATE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 6 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

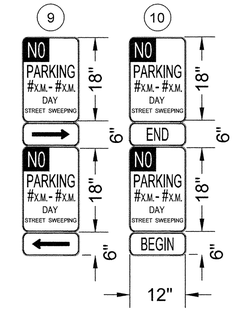

Base Map Sheet # 6

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS

REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY:
CRAIG BILEZERIAN, PE — DATE 4/27/16
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 7 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

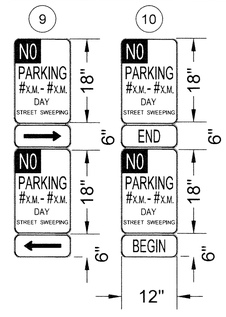

Base Map Sheet # 7

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY: 4/27/16
CRAIG BILEZERIAN, PE — DATE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 8 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

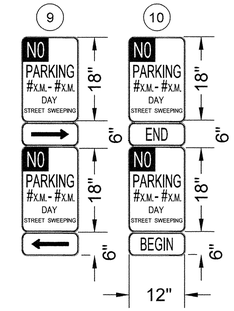

Base Map Sheet # 8

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig.
TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY:
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)
4/27/16 DATE

SHEET 9 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

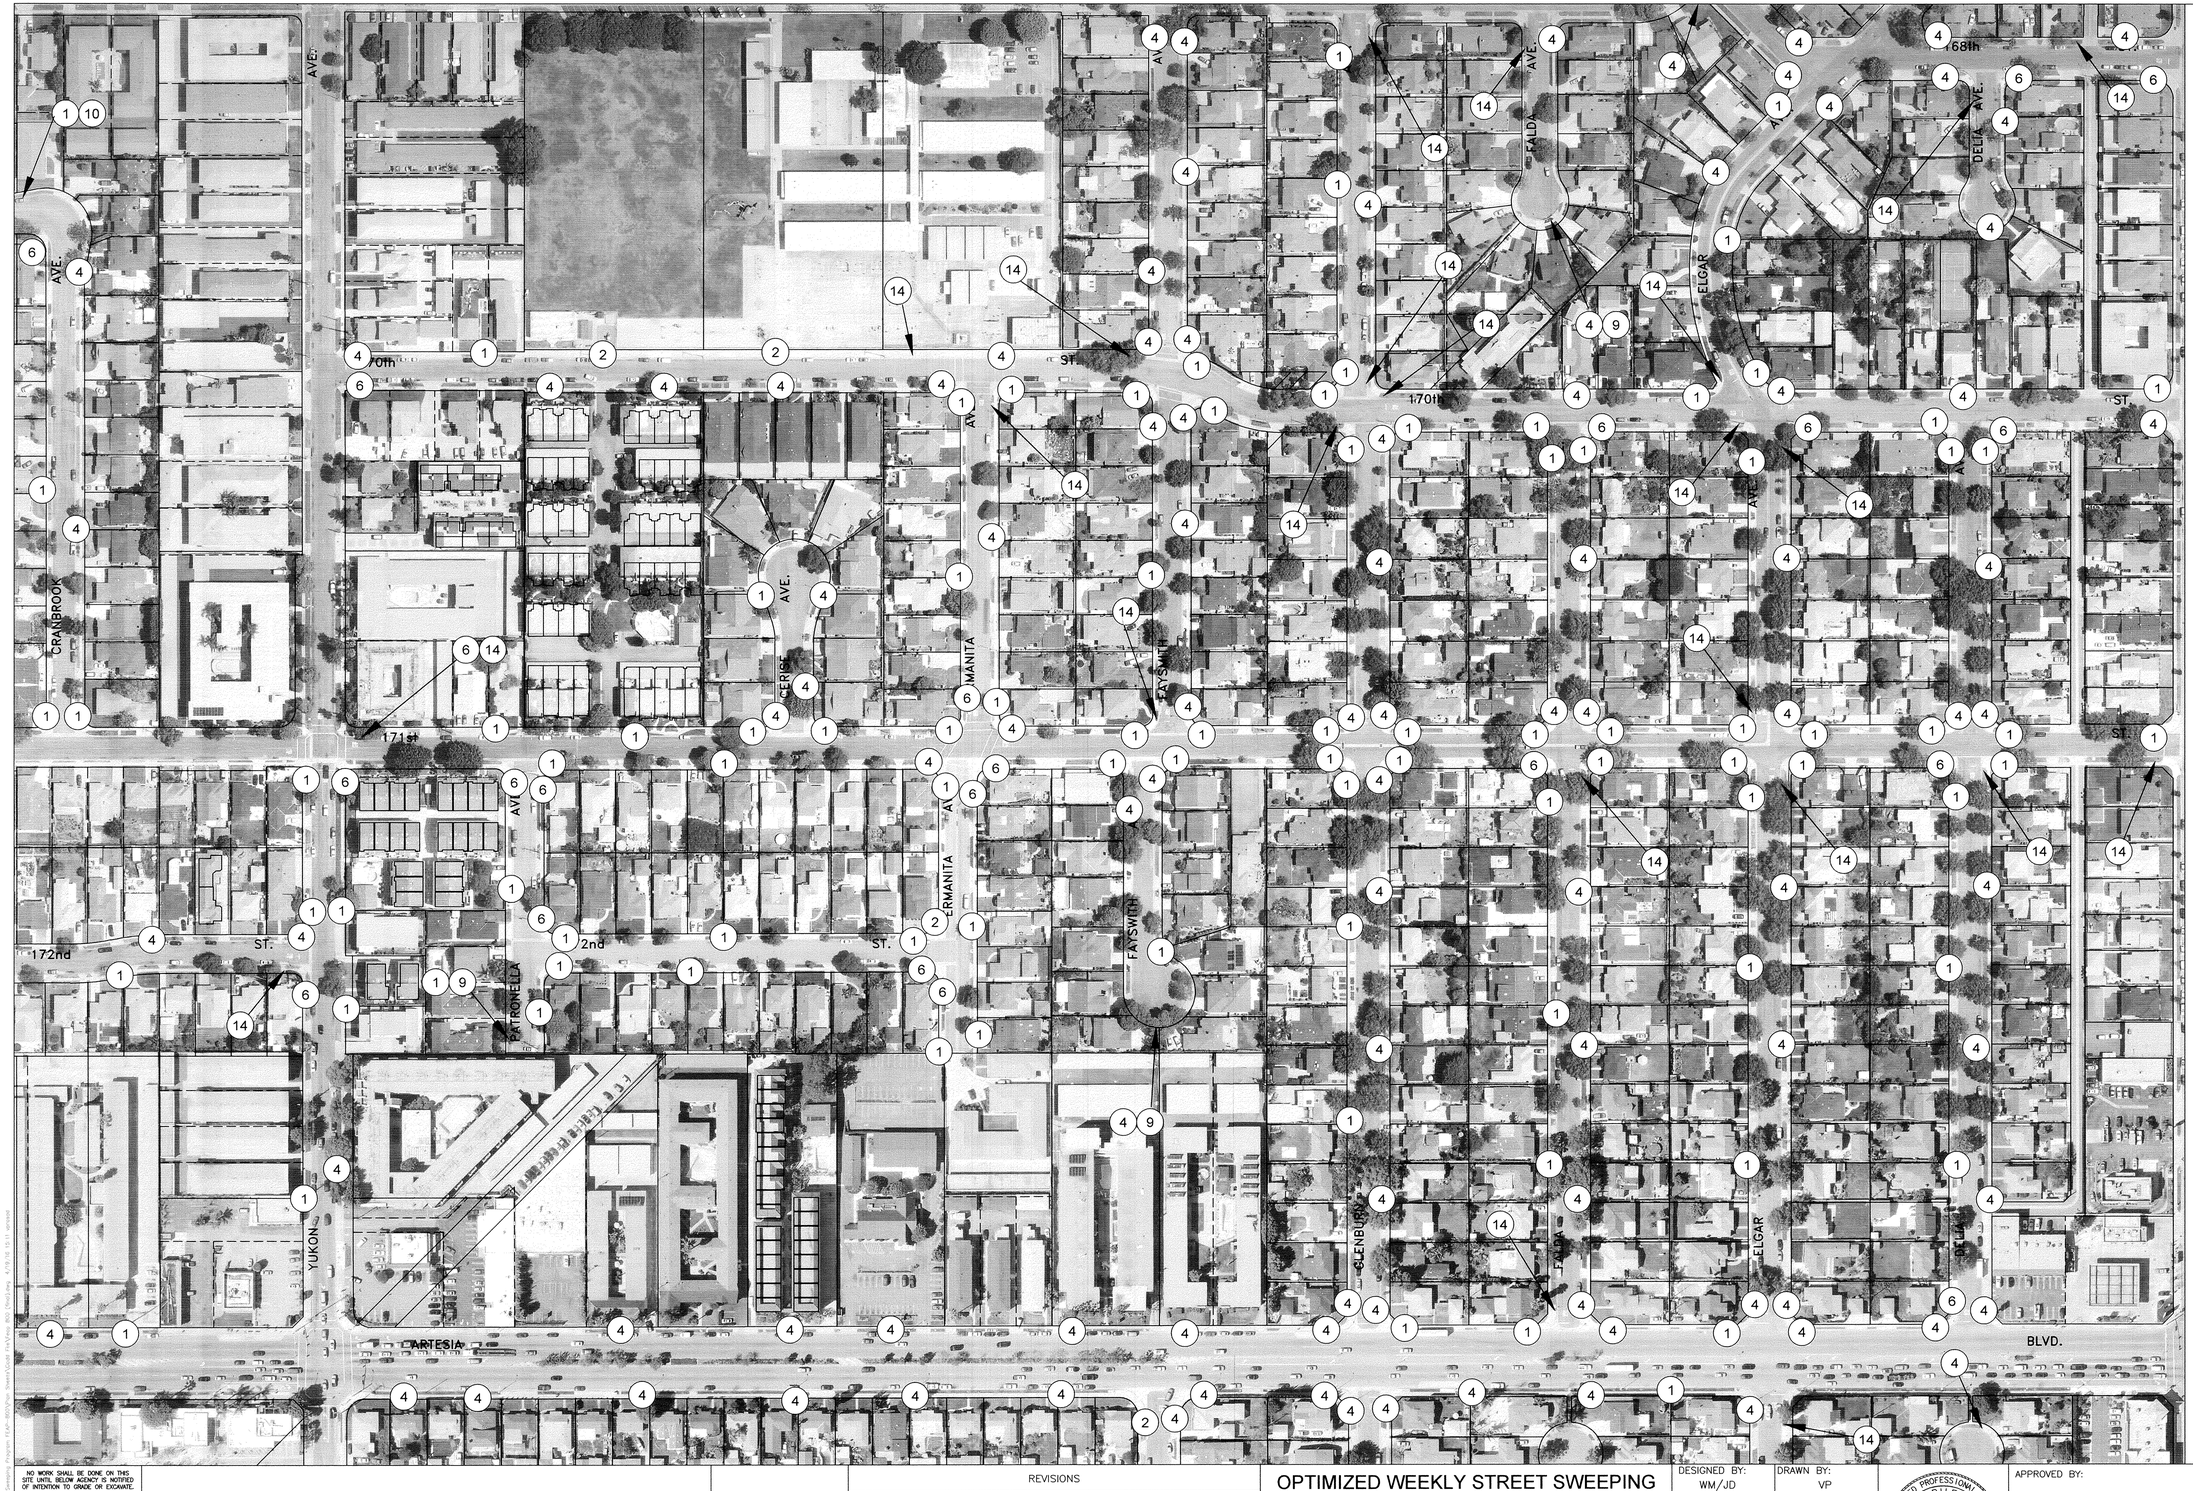

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

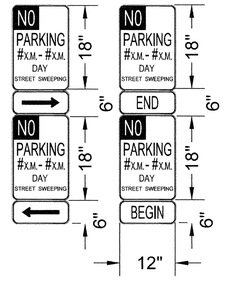

Base Map Sheet # 9

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD | DRAWN BY: VP

PROJECT ENGINEER: WILSON MENDOZA

ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY: 4/27/16

CRAIG BILEZERIAN, PE — DATE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 10 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN, INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

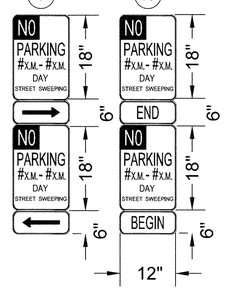

Base Map Sheet # 10

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS

REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY:
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)
DATE 4/27/16

SHEET 11 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

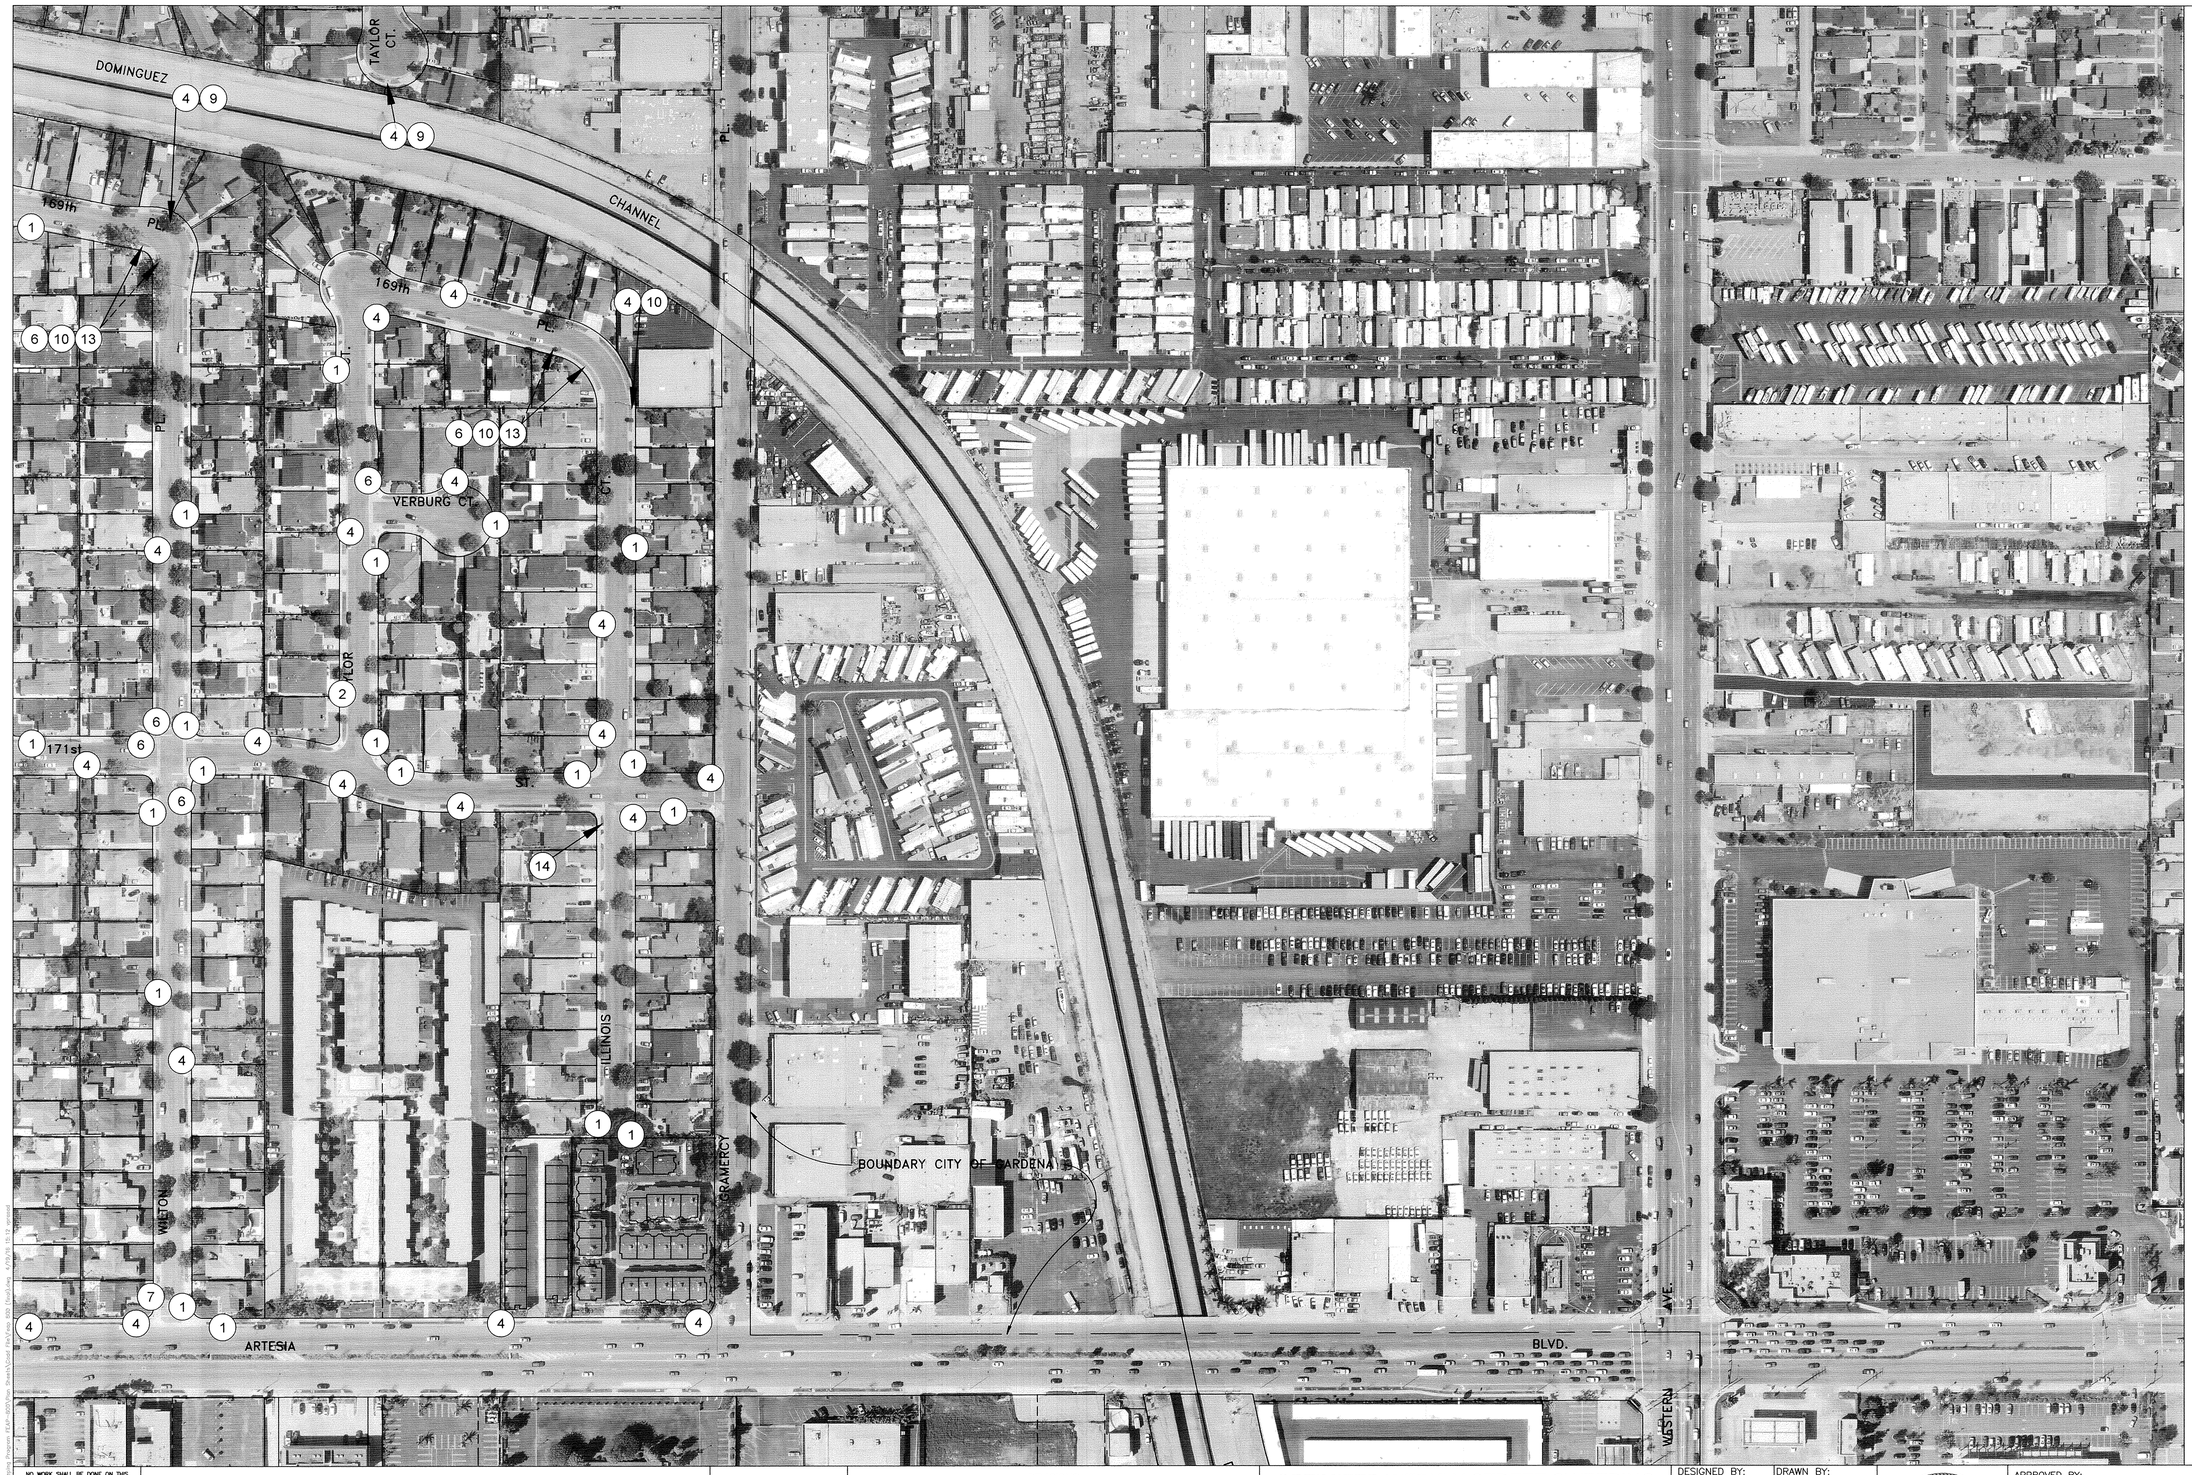

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

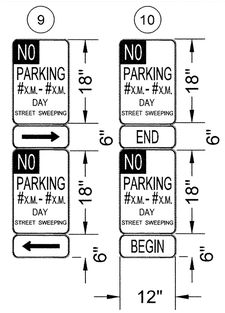

Base Map Sheet # 11

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig.
TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS

REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY:
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)
4/27/16
DATE

SHEET 12 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

9

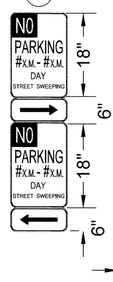

10

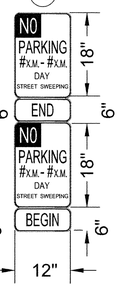

Base Map Sheet # 12

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY:
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)
4/27/16
DATE

SHEET 13 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

X:\SWEEP\ JD\Optimized Weekly Street Sweeping Program (FEAP-800)\Exhibits\Sheets\Sheet1.PNG Feb 800 (final).dwg 4/19/16 10:11 wmendoz

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

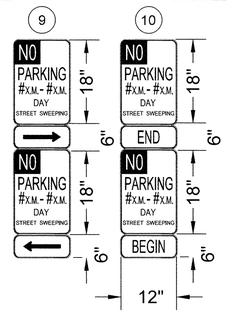

Base Map Sheet # 13

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD | DRAWN BY: VP

PROJECT ENGINEER: WILSON MENDOZA

ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG S. BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY: 4/27/16

CRAIG BILEZERIAN, PE DATE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 14 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

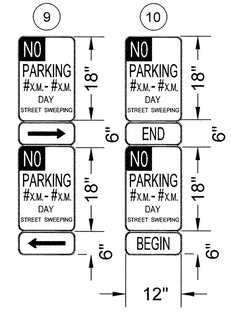

Base Map Sheet # 14

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD | DRAWN BY: VP

PROJECT ENGINEER: WILSON MENDOZA

ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY: 4/27/16

CRAIG BILEZERIAN, PE — DATE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 15 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

9

NO PARKING #X.M. - #X.M. DAY STREET SWEEPING → (18" × 6")

NO PARKING #X.M. - #X.M. DAY STREET SWEEPING ← (18" × 6")

10

NO PARKING #X.M. - #X.M. DAY STREET SWEEPING (18" × 6")

END (6")

NO PARKING #X.M. - #X.M. DAY STREET SWEEPING (18" × 6")

BEGIN (6")

12"

Base Map Sheet # 15

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

N

REVISIONS

REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD | DRAWN BY: VP

PROJECT ENGINEER: WILSON MENDOZA

ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY: 4/27/16

CRAIG BILEZERIAN, PE DATE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 16 OF 74

SCALE: 1" = 100' | SPECIFICATION NO.

SUPPLEMENTAL PLAN NO. SEE TITLE SHEET

PLAN NO. **SD-508**

X:\SHOP\Optimized Weekly Street Sweeping Program, FEAP 800\Plan Sheets\Optimized Sheet Plans 800 Grid.dgn 4/26/16 10:14 wmend

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

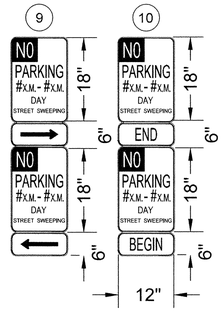

Base Map Sheet # 16

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig.
TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

N

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY:
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)
DATE 4/27/16

SHEET 17 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

X:\DOT\SP_Optimized Weekly Street Sweeping Program, FEAP-800\Plan Sheets\Base Map\Map 800 (final).mxd 4/13/16 15:15 sprosad

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

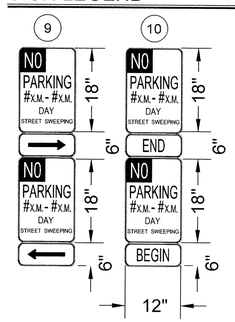

Base Map Sheet # 17

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig.
TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

N

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY:
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)
DATE 4/27/16

SHEET 18 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN, INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

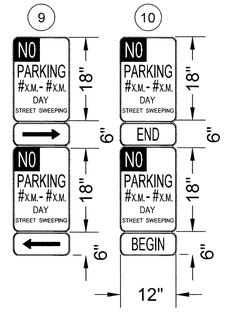

Base Map Sheet # 18

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

N

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY: 4/27/16 DATE
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 19 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

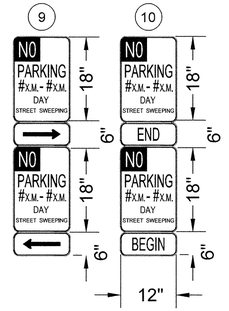

Base Map Sheet # 19

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig.
TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY:
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)
4/27/16
DATE

SHEET 20 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

X:\ENG\CP_Optimized Weekly Street Sweeping Program_FEAP-800\Plan Sheets\Used Files\Feap 800 Final.dwg 4/26/16 15:56 gerrold

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

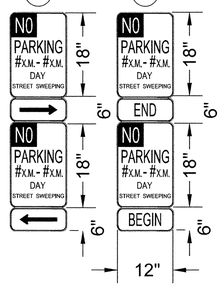

Base Map Sheet # 20

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY:	DRAWN BY:
WM/JD	VP

PROJECT ENGINEER: WILSON MENDOZA

ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER — CRAIG BILEZERIAN — No. 55339 — Exp. 12/31/16 — CIVIL — STATE OF CALIFORNIA

APPROVED BY:

CRAIG BILEZERIAN, PE — DATE 4/27/16
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET	21	OF	74
SCALE: 1" = 100'		SPECIFICATION NO.	
SUPPLEMENTAL PLAN NO.	SEE TITLE SHEET		
PLAN NO.	**SD-508**		

X:\ENGR\Traffic Engineering\Street Sweeping Program\FEAP-800\Final Routes\Exhibit Files\Exhibit 800 Final.dwg, 4.7(A).01, 36x12 anthem

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

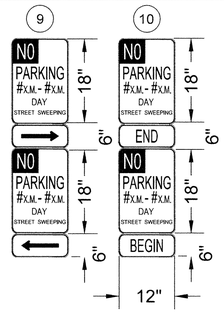

Base Map Sheet # 21

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig.
TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS

REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER — CRAIG BILEZERIAN — No. 55339 Exp. 12/31/16 — CIVIL — STATE OF CALIFORNIA

APPROVED BY:
CRAIG BILEZERIAN, PE — DATE 4/27/16
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 22 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

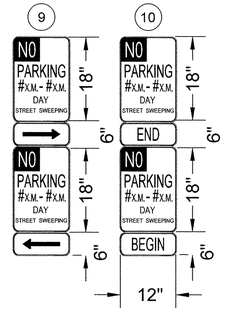

Base Map Sheet # 22

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.
811 Know what's below. Call before you dig.
TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY: 4/27/16 DATE
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

SHEET 23 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**

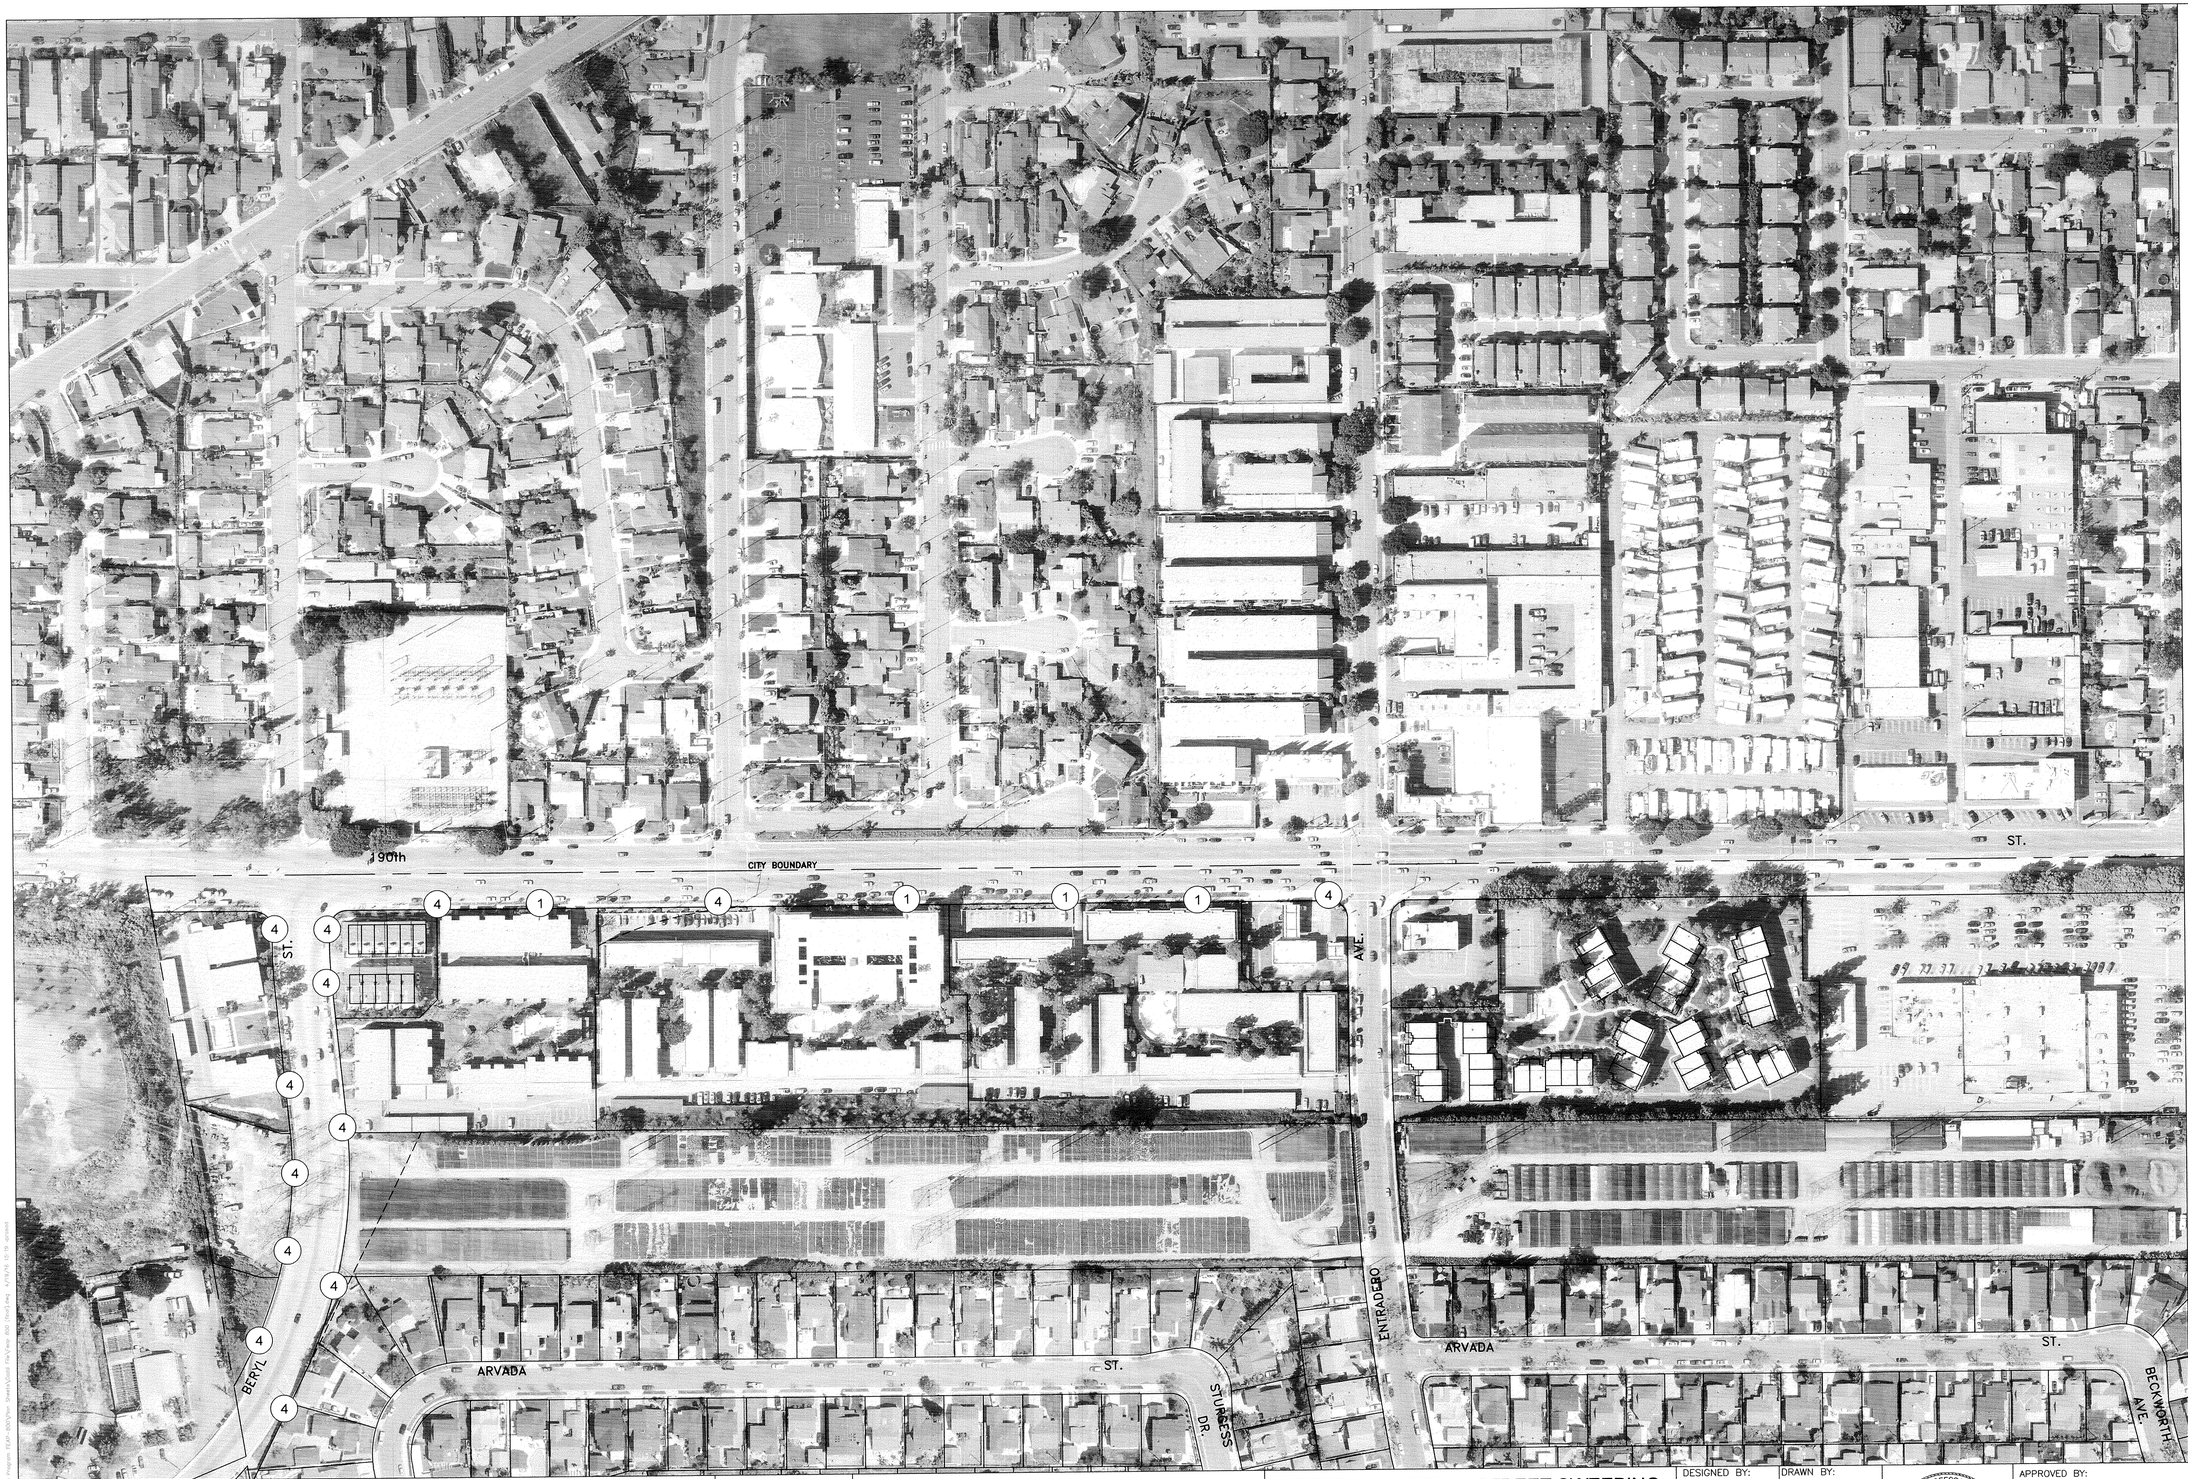

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN. INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS. INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

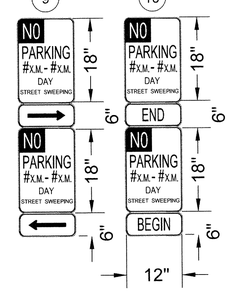

Base Map Sheet # 23

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS				
REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY:	DRAWN BY:
WM/JD	VP

PROJECT ENGINEER: WILSON MENDOZA

ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY:

CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)

4/22/16 DATE

SHEET 24 OF 74

SCALE: 1" = 100'

SPECIFICATION NO.

SUPPLEMENTAL PLAN NO. SEE TITLE SHEET

PLAN NO. **SD-508**

X:\ENGR\Signal Design\Optimized Weekly Street Sweeping Program FEAP-800\Plans Sheets\Dwgs Plan\Feap 800 Vinyl3.dwg 1/19/2016 12:19 wsmith

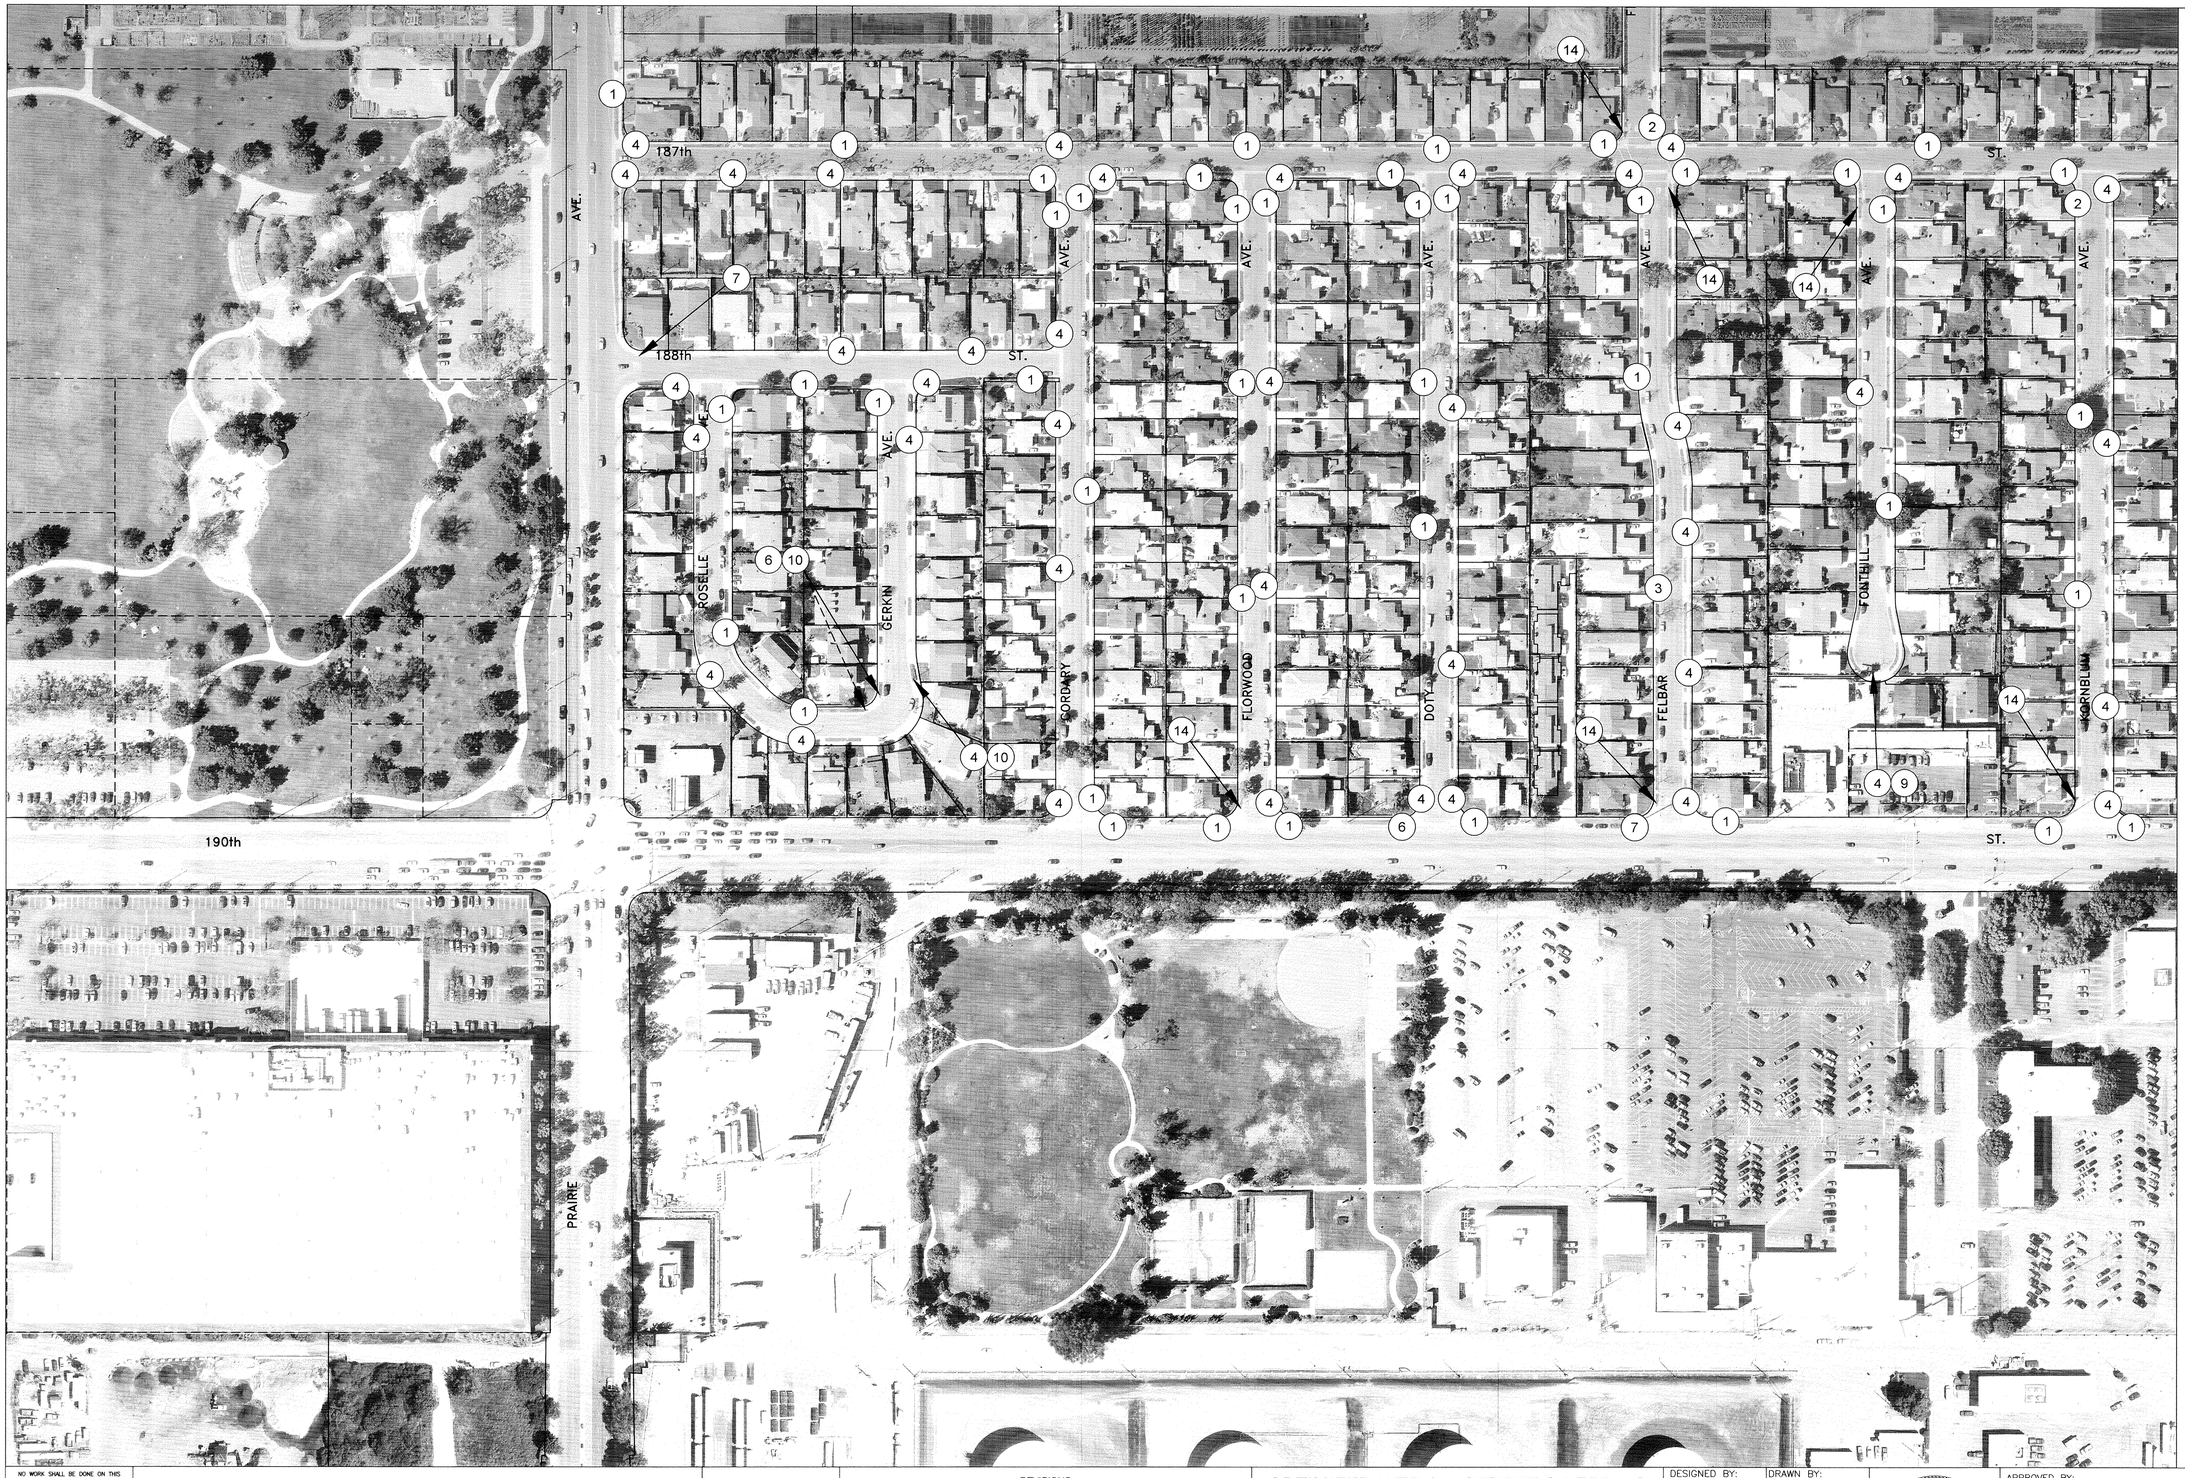

CONSTRUCTION NOTES

1. INSTALL NEW SIGN AND U-CHANNEL POST IN LANDSCAPING.
2. INSTALL NEW SIGN AND U-CHANNEL POST IN CONCRETE.
3. INSTALL NEW SIGN AND U-CHANNEL POST IN PAVERS.
4. INSTALL NEW SIGN ON EXIST. POST OR LIGHT POLE.
5. REMOVE EXIST. "NO PARKING" SIGN, INSTALL NEW "NO PARKING" SIGN ON EXIST. POST OR LIGHT POLE.
6. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN LANDSCAPING, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
7. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN CONCRETE, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
8. REMOVE EXIST. SIGN(S) AND POST. INSTALL SQUARE POST IN PAVERS, INSTALL NEW "NO PARKING" SIGN, AND REINSTALL EXIST. SIGN(S).
9. INSTALL ADDITIONAL "NO PARKING" SIGN WITH TWO ARROWS SIGNS. PER SIGN LEGEND.
10. INSTALL ADDITIONAL "NO PARKING" SIGNS WITH AN "END" AND A "BEGIN" SIGN. PER SIGN LEGEND.
11. INSTALL "BEGIN" SIGN BELOW "NO PARKING" SIGN.
12. INSTALL "END" SIGN BELOW "NO PARKING" SIGN.
13. RELOCATE THE EXIST. SIGN POST LOCATION, PER ENGINEER.
14. REMOVE EXISTING SIGN(S) AND POST. INSTALL U-CHANNEL POST IN LANDSCAPING. INSTALL NEW "NO PARKING" SIGN AND REINSTALL EXIST. SIGN(S).

NOTE: SEE STREET SWEEPING ROUTING STUDY FOR DATE AND TIME.

SIGN LEGEND

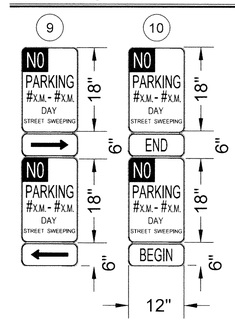

Base Map Sheet # 26

811 Know what's below. Call before you dig. TWO WORKING DAYS BEFORE YOU DIG

NO WORK SHALL BE DONE ON THIS SITE UNTIL BELOW AGENCY IS NOTIFIED OF INTENTION TO GRADE OR EXCAVATE.

CITY OF TORRANCE
PUBLIC WORKS DEPARTMENT

REVISIONS

REV	DATE	BY	CHECKED	DESCRIPTION

OPTIMIZED WEEKLY STREET SWEEPING PROGRAM, FEAP 800

STREET SWEEPING SIGNAGE PLACEMENT PLAN

DESIGNED BY: WM/JD
DRAWN BY: VP
PROJECT ENGINEER: WILSON MENDOZA
ENGINEERING MANAGER: JOHN DETTLE, P.E.

REGISTERED PROFESSIONAL ENGINEER CRAIG BILEZERIAN No. 55339 Exp. 12/31/16 CIVIL STATE OF CALIFORNIA

APPROVED BY:
CRAIG BILEZERIAN, PE
CITY ENGINEER
R.C.E. NO. 55339 (EXP. 12/31/2016)
4/27/16 DATE

SHEET 25 OF 74
SCALE: 1" = 100'
SPECIFICATION NO.
SUPPLEMENTAL PLAN NO. SEE TITLE SHEET
PLAN NO. **SD-508**